


PNEUMATIC F18-140 18G C1 BRADDER B20057 (90F40B MK2)

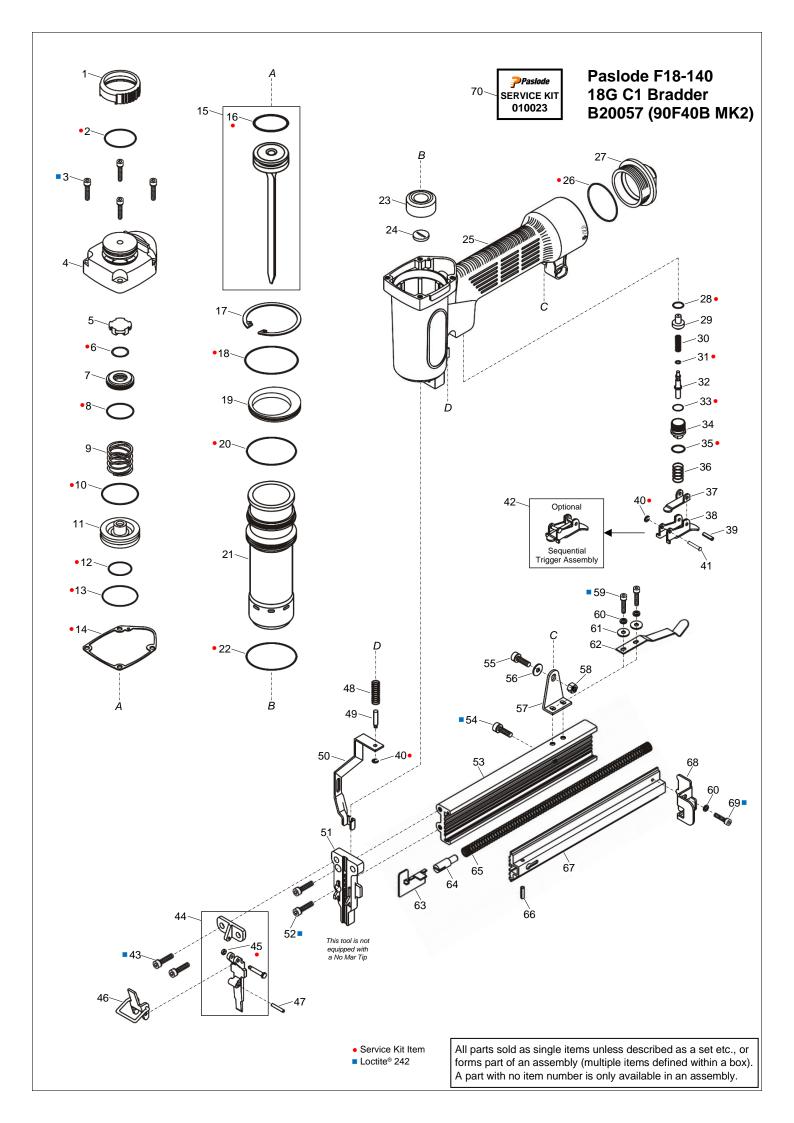

ILLUSTRATED PARTS LIST



			,	_				
1	WES-18	1	Defector, Exhaust		36	WSP-13	1	Spring
*• 2	WOR-61	1	O-Ring		37	WTG-02	1	Lever, Trip (Bump)
3	WM5X25	4	Screw SHC		38	WTG-01	1	Trigger
4	WCA-10	1	Cap		39	WSM-03	1	Pin, Roll
5	WES-19	1	Exhaust	*•	40	WE-25	2	E-Ring (RPLS WE-2.5)
*• 6	WOR-01	1	O-Ring		41	WSM-04	1	Pin, Step
7	WCA-11	1	Guide Piston, Main Valve	→	42	WTG-70	1	Trigger Assembly, Sequential (Optional)
*• 8	WOR-62	1	O-Ring		43	WM5X20	2	Screw SHC
9	WSP-01	1	Spring		44	WFP-69	1	Plate Assembly, Nose
*• 10	WOR-03	1	O-Ring, Main Valve	•	45	WOR-103	1	O-Ring, Retaining
11	WPV-08	1	Piston, Main Valve		46	WDL-03	1	Latch
*• 12	WOR-04	1	O-Ring, Main Valve Piston Stop		47	WSM-22	1	Pin, Roll
*• 13	WOR-05	1	O-Ring, Cylinder Seal		48	WSP-12	1	Spring, Probe
*• 14	WWS-30	1	Gasket, Inlet Cap		49	WSM-83	1	Shaft, Probe
* 15	WPS-45	1	Piston & Driver Assembly		50	WST-16	1	Probe
*• 16	WOR-07	1	O-Ring, Piston		51	WP-25	1	Nose
17	WSP-35	1	Circlip		52	WM4X12	2	Screw SHC
*• 18	WOR-63	1	O-Ring, Bulkhead		53	WMZ-01	1	Magazine
19	WCY-14	1	Bulkhead		54	WM5X8	1	Screw SHC (Magazine Stop)
*• 20	WOR-64	1	O-Ring, Cylinder		55	WM5X18	1	Screw SHC
21	WCY-15		-,		56	WWS-01	1	Washer 5mm, Flat
*• 22	WOR-65	1	O-Ring, Cylinder		57	WHR-01	1	Bracket
* 23	WBP-01	1	Bumper		58	WM5	1	Nut 5mm, Lock
24	WSW-01	1	Seal, Driver		59	WM4X10	2	Screw SHC
25	WBD-22	1	Body Housing		60	WWS-02	3	Washer 4mm, Spring
*• 26	WOR-55	1	O-Ring, Inlet Cap		61	WWS-07	2	Washer 4mm, Flat
27	WCA-12	1	Cap, Inlet		62	WSP-11	1	Latch, Magazine
*• 28	WOR-09	1	O-Ring		63	WFD-01	1	Pusher
29	WVS-28	1	Housing, Inner Trigger Valve		64	WES-03	1	Guide, Pusher & Spring
30	WSP-34	1	Spring		65	WSP-05	1	Spring, Pusher
*• 31	WOR-10	1	O-Ring, Spool Valve		66	WSM-07	1	Pin, Roll
32	WVS-29	1	Spool Valve, Trigger Valve		67	WMC-01	1	Cover, Magazine
*• 33	WOR-20	1	O-Ring		68	WFC-07	1	Cover, Magazine End
34	WVS-27	1	Housing, Outer Trigger Valve		69	WM4X8	1	Screw SHC
*• 35	WOR-11	1	O-Ring	→	70	010023	AR	Service Kit

- * Normal Wear Items
- Included in Service Kit
- Apply Loctite® 242 (Blue)
- → New Change

AR As Required

Accessories supplied in carry case*

- 1 x 30ml Oil
- 1 x 3mm Hex Key
- 1 x 4mm Hex Key
- 1 x Safety Glasses

*Carry case non-procurable

Tool supplied with 1/4 NTP Hansen® style air adaptor (installed) Refer item (42) for Optional Sequential Trigger Assembly



Use eye protection when cleaning tools.

Use eye and ear protection when operating/testing tools.

Use degreaser in a well ventilated area

Use only approved Paslode Compressor Tool Oil PN F27625.

Never use mineral based oils.

Oil tool daily with 2 to 4 drops via air inlet connection.

Heavy usage will require more frequent oiling.

Operating air pressure at the tool inlet: 480-690 kpa (70-100 psi).

Never exceed the maximum stated air pressure.

Regularly check the regulator and pressure gauge operation.

A water/oil trap must be installed on the regulator outlet and drained regularly.

Never use bottled air or gases such as oxygen to operate the tool.



Change Notes

Revision 0

Item	Part No.	Item Description	Change	Action/Change Description	
N/A		M/V Piston Guide Assy	Availability	Non-procurable	
IN/A	N/A	Main Valve Assy			
22*	Various	Piston		DOA 15 Distan & Driver Assembly MDC 45	
23*	Vanous	Driver		POA 15, Piston & Driver Assembly WPS-45	
31*		Nose Support Plate		POA 44, Nose Plate Assembly WFP-69	
32*		Nose Plate			

Revision 1

Item	Part No.	Item Description	Change	Action/Change Description	
39*	WE-2.5	E-Ring	Format	Duplicate item. Deleted 39* & updated item 40 quantity	
71*	WWS-02	Washer, Spring	Format	Duplicate item. Deleted 71* & updated item 60 quantity	
N/A	Various	Assemblies/Flag Notes	Schematic	Added Service Kit & Kit item flags Added Loctite® flags	
		Parts/Notes Parts Legend		Adopted conventional naming Added Service Kit & Kit item flags Added Loctite® and item usage	

^{*}Item numbering per previous revision

Revision 2

Item	Part No.	Item Description	Change	Action/Change Description		
74*	WSM-74	Step Pin		POA 44, Nose Plate Assembly WFP-69 (Removed from parts list – Not itemised in R0 schematic)		
42	WTG-70	0 Trigger Assy (Seq.)	Availability	Introduced Optional Sequential Trigger Assembly		
70	010023	Service Kit		Introduced Service Kit		
N/A	Various	Assemblies/Flag Notes	Schematic	Complete layout re-design & re-numbering for clarity Defined available ANZ assemblies		
		Parts/Notes	Parts Legend	Re-numbered for clarity		

Purchase on Assembly
*Item numbering per previous revision

Purchase on Assembly
*Item numbering per previous revision