




Part No. B20118

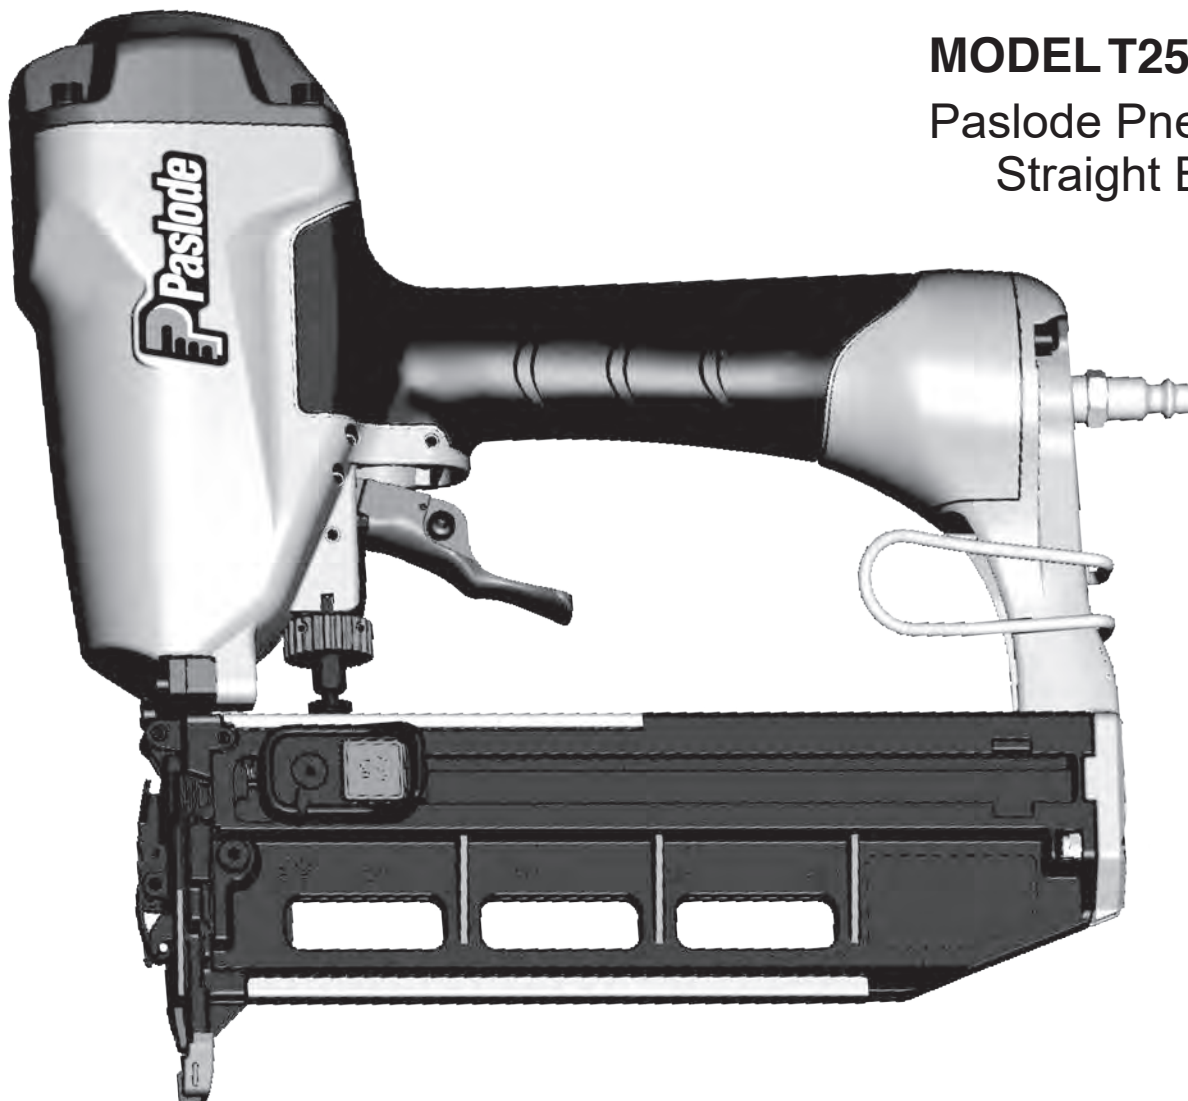

MODEL T250-16S

Paslode Pneumatic
Straight Bradder


IMPORTANT!

DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

TOOL SCHEMATIC

T250-16S B20118

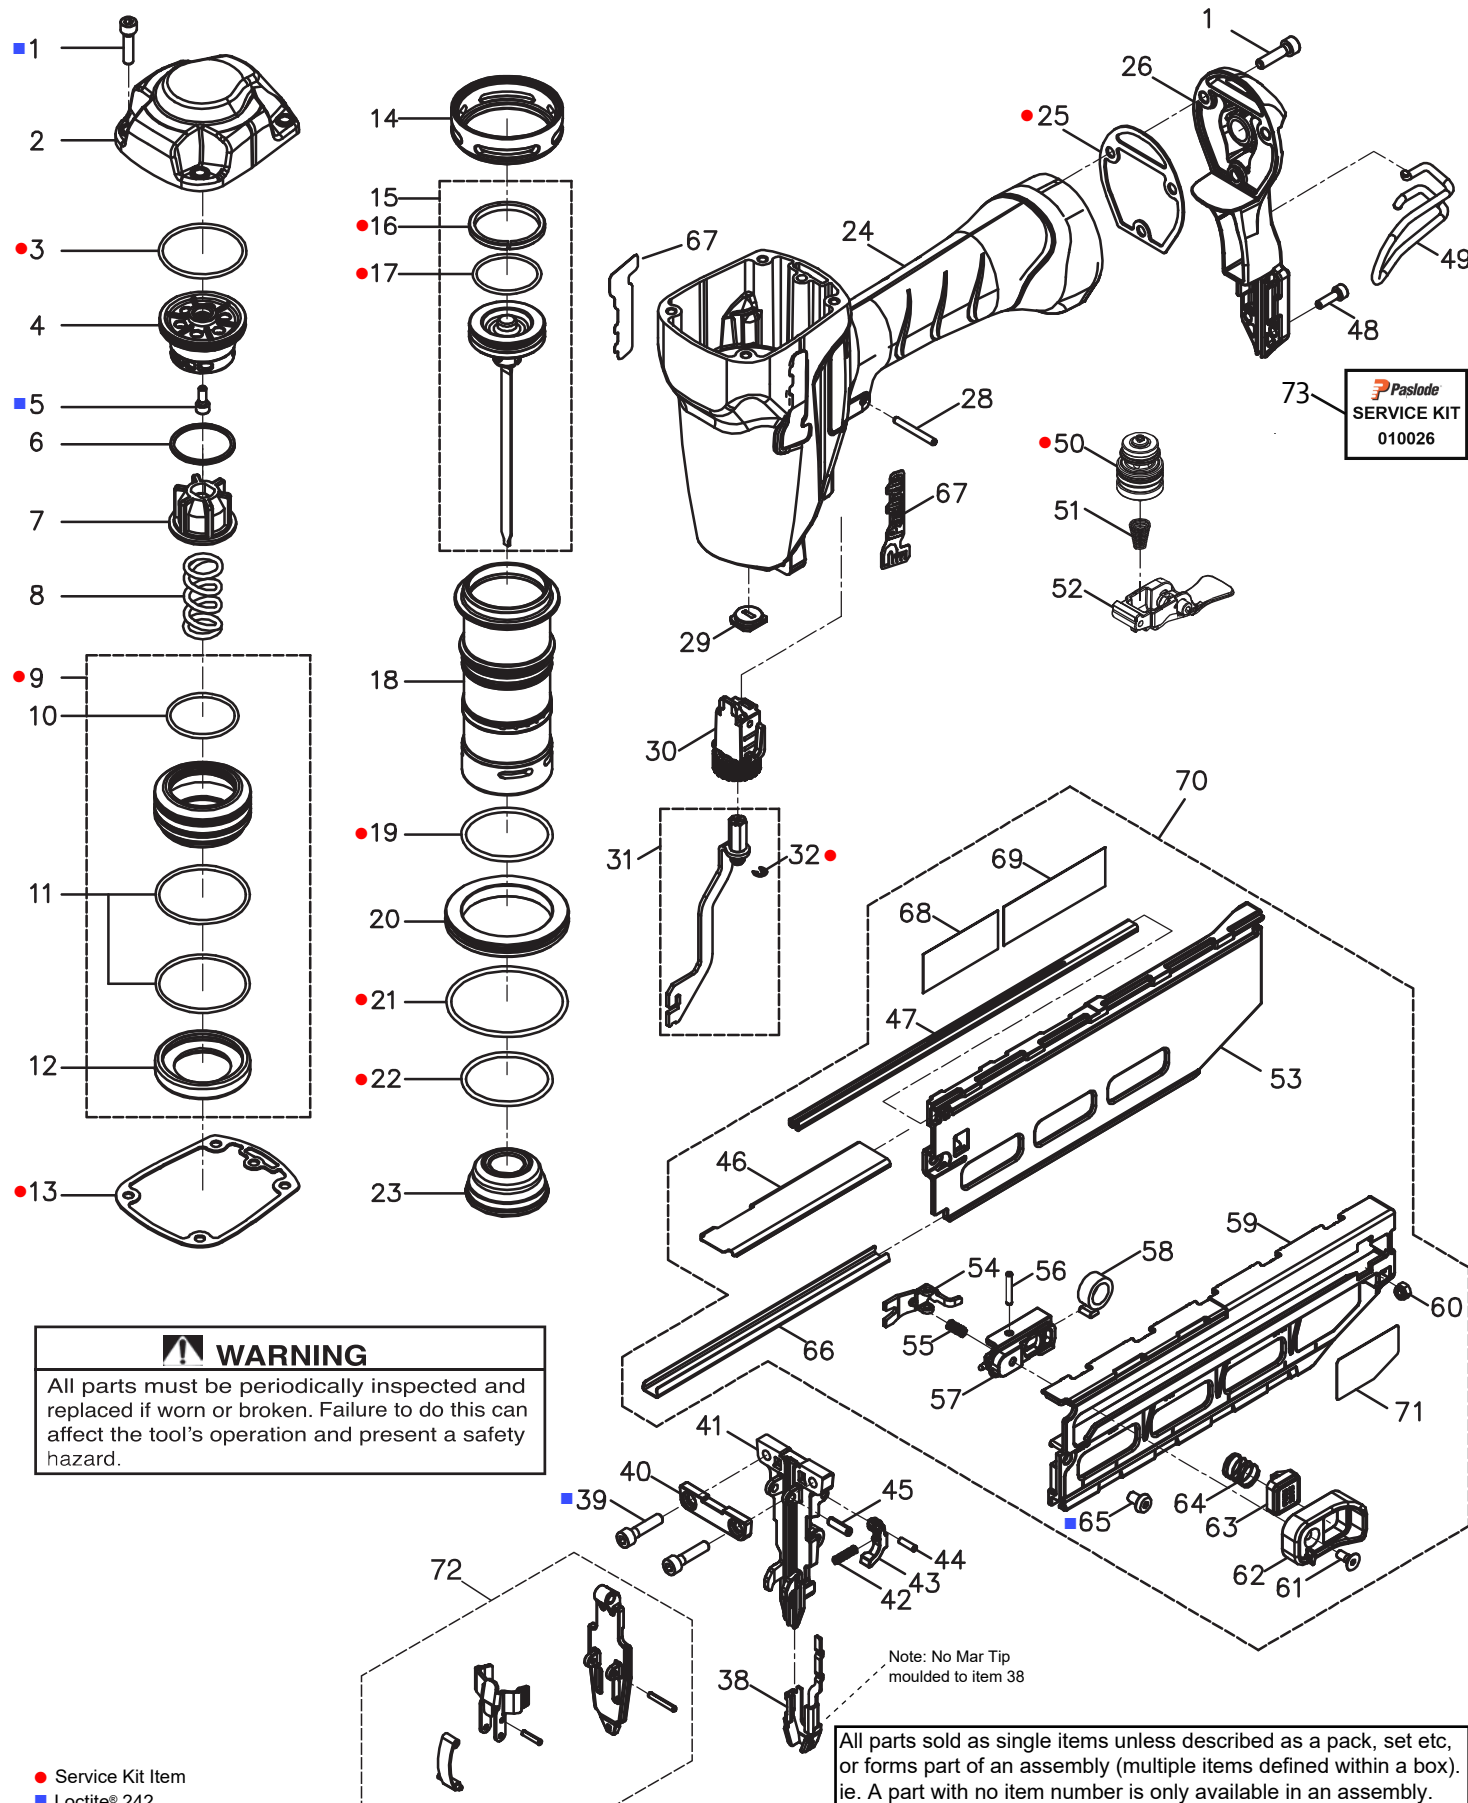

PARTS LEGEND

T250-16S

B20118

■ 1	515501	7 Bolt SHC	41	515541	1 Nose
2	515502	1 Cap	42	617456	1 Spring
* ● 3	515503	1 O-Ring	43	515543	1 Lever, Lockout
4	515504	1 Ring, Top Cap	44	515544	1 Pin, Roll
■ 5	515505	1 Bolt SHC	45	515545	1 Pin, Roll
6	515506	1 Spacer	46	515546	1 Plate, Upper
7	515507	1 Stopper, Piston	47	515547	1 Guide, Nail
8	515508	1 Spring	48	515548	2 Bolt SHC
* ● 9	515509	1 Valve Assy, Main	49	515549	1 Hook, Belt
* 10	515510	1 O-Ring	● 50	515550	1 Valve Assy, Trigger
* 11	515511	2 O-Ring	51	617780	1 Spring
* 12	515512	1 Seal, Cylinder	52	515552	1 Trigger, Selectable
* ● 13	515513	1 Gasket, Cap	53	515553	1 Magazine RH
* 14	515514	1 Collar	54	515554	1 Follower (Pusher)
* 15	515515	1 Driver & Piston Assy	55	515555	1 Spring
* ● 16	515516	1 Ring, Wear	56	515556	1 Pin, Roll
* ● 17	515517	1 O-Ring	57	515557	1 Core, Follower (Pusher Seat)
18	515518	1 Cylinder	58	515558	1 Spring, Negator
* ● 19	515519	1 O-Ring	59	515559	1 Magazine LH
* 20	515520	1 Ring, Cylinder	60	515560	2 Nut, Lock
* ● 21	515521	1 O-Ring	61	515561	1 Screw PH TF
* ● 22	515522	1 O-Ring	62	515562	1 Body, Follower (Pusher Upper Seat)
* 23	515523	1 Bumper	63	515563	1 Button, Follower
24	515524	1 Body Housing	64	515564	1 Spring
* ● 25	515525	1 Gasket, Inlet Cap	■ 65	515565	2 Screw UH
26	515526ANZ	1 Cap, Inlet	66	515566	1 Plate, Lower
28	515528	4 Pin, Roll	67	515567	2 Label, Logo Body
29	515529	1 Seal, Bumper	68	515569ANZ	1 Label, Data Plate
30	515530	1 Adjustment Assy, Depth	** 69	515568	1 Label, Warning
31	515531	1 Connector, WCE	70	515570ANZ	1 Magazine Assy
● 32	905588	1 E-Ring	71	515571	1 Label, Lock
* 38	515538	1 Probe & No Mar Tip Assembly	72	515536A	1 Nose Plate Assembly
■ 39	515539	2 Bolt SHC	73	010026	AR Service Kit
40	515540	1 Plate, Set			

* Normal Wear Items


** Ensure Warning Label is affixed and legible

● Included in Service Kit

■ Apply Loctite® 242 (Blue)

AR As Required

AIR CONSUMPTION CHART

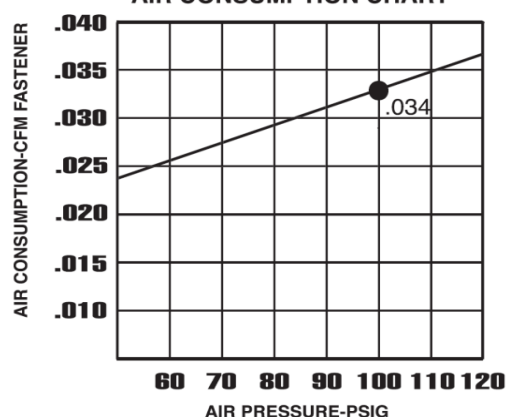

SAFETY INSTRUCTIONS

WEAR EYE AND HEARING PROTECTION




Always wear approved eye and hearing protection when operating tool. Ensure others in the near vicinity use the same protective equipment.



Use eye protection when cleaning tool.



DO NOT EXCEED MAXIMUM RECOMMENDED AIR PRESSURE

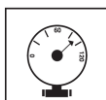

Operate the tool using only the recommended air pressure. Do not exceed the maximum air pressure marked on the tool. Be sure the air pressure gauge is operating properly and check it at least twice a day.

Never use bottled air or gases such as oxygen to operate the tool, as this may cause the tool to explode.



WARNING: All parts must be periodically inspected and replaced if worn or damaged. Failure to comply can affect the tool's operation and present a safety hazard.